



Model: AL1000AC

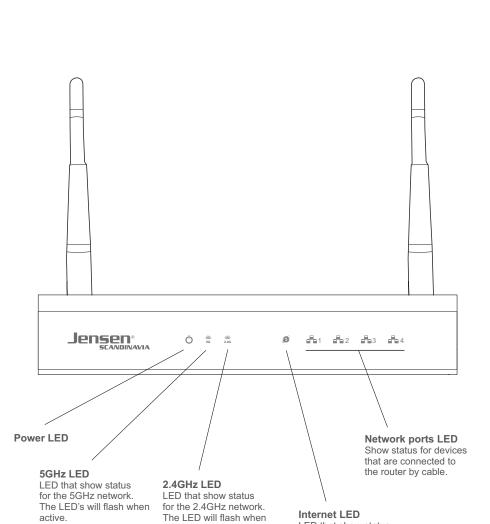

LED that show status

for the Internet port.
The LED will flash when active.

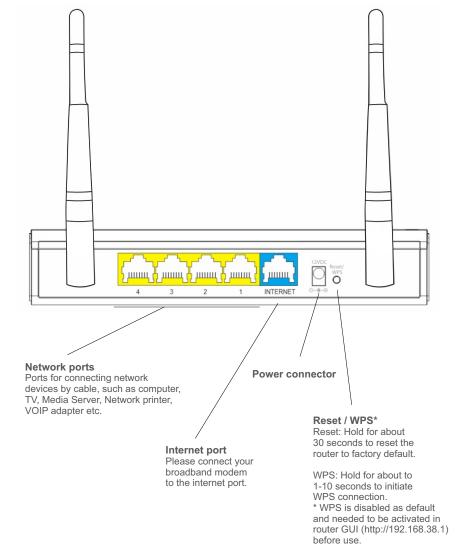








active.





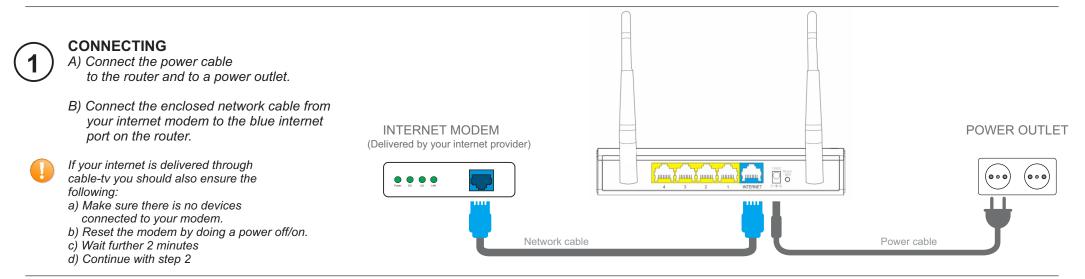

(2)

CONNECT TO WIRELESS NETWORK

Your new router has two wireless networks. One for 2.4GHz and one for 5GHz.

The router is pre-configured with network names and passwords. These are stated on the top of your router and the underside sticker.

Search for the wireless networks with your device and connect.





Mac



iPhone/iPad



Android



FINISH

Your wireless device is now connected to internet and ready for use.

Problem		Solution
No access to internet	→	Log into the router menu by entering http://192.168.38.1 in your web browser. Username = admin og password = 1234 Select EASY SETUP from main menu and follow the setup wizard
Change network name	→	Log into the router menu by entering http://192.168.38.1 in your web browser. Username = admin og password = 1234 Select WIRELESS from main menu
Change encryption key	→	Log into the router menu by entering http://192.168.38.1 in your web browser. Username = admin og password = 1234 Select WIRELESS from main menu
Change channel	→	Log into the router menu by entering http://192.168.38.1 in your web browser. Username = admin og password = 1234 Select WIRELESS from main menu. Select the channel you want to use.

Customer support

If you need help with the setup you can call our free phone support. When calling you will be asked to enter an support-id.

This is stated on top and underside sticker.

Norway 22 32 30 76 Sweden 08 38 30 00 Denmark 70 70 21 22 Finland 09 455 21 22

or send an email to

support@jensenscandinavia.com